


Only for 144904BAK

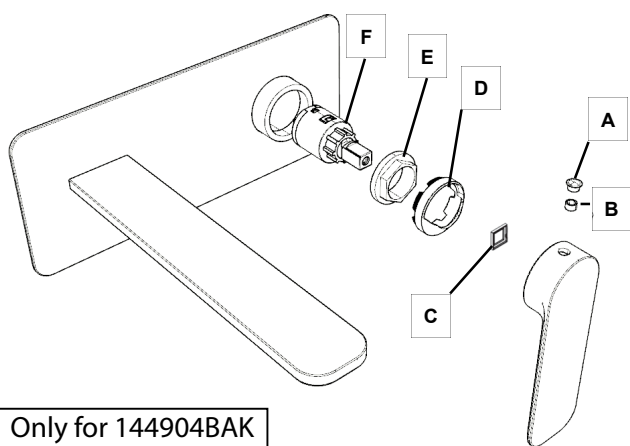

4

MAINTENANCE



Only for 144904BAK



CLEANING - REPLACE THE CARTRIDGE

In the event of any problems, servicing is straight forward.

First shut off the water supply to the tap. Pull out the cap (A) from the handle and with an allen key 2,5mm loosen the grub screw (B) in handle, but do not remove it. Take off the handle, unscrew insert (C) and the cartridge cover (D), carefully using a correct size spanner unscrew the retaining nut (E) and remove the cartridge (F). Replace or wash the cartridge with clean running water and make sure that any trapped debris have been removed. Dry and lightly grease the seals (only use silicone grease) insert the cartridge, screw retaining nut, cartridge cover followed by the insert and handle.

CAUTION: retaining nut (E), must be screw with a torque of 10/11Nm, in case of incorrect tighten, the mixer can be damaged.

6





First shut off your water heating system then, with the mains stop cock closed, open the lowest hot and cold taps in the house and allow to run until the cold storage tank and pipes are empty (the hot water storage cylinder airways remains full). Where combination boilers are fitted it is only necessary to turn off the boiler and shut off the incoming mains. Fitting isolating valves to the inlet feeds is recommended for ease of maintenance. Flush the piping with plenty of water prior to installation.

INSTALLATION

- Decide on a suitable position for the Mixer where all users can operate; determine the route for the incoming cold-hot supply pipe work. Mark an opening sufficient to accommodate the mixer body, for dimensions refer to template (see pag. 3).
- Install the hot and cold supply with ½" pipe connection to the tap body and ensure precise horiz/vertical alignment with a spirit level.
- Don't remove plastic cover (2) on the built-in tap, until the wall is completely finished; when tiles have set, remove the plastic cover.
- Installation spout: screw and seal the fitting (A) in the water outlet connection on the wall, insert the concealing plate, smooth side against the wall, insert the spout and tighten it with the grub screw (B).
- Set the handle in position and secure it with the grub screw, and relace the cap.

INSTALLATION SPOUT

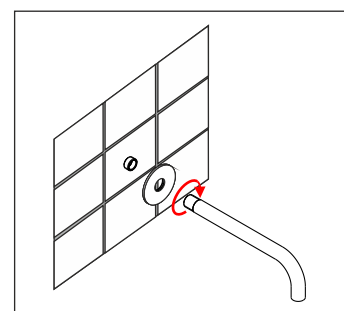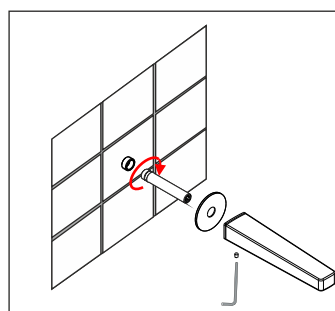



5

CLEANING

The chrome plate we use on our taps is very durable, nevertheless care should be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to acid attack and some strong substances such as household cleaners, disinfectants, denture cleaners, hair dyes, wine making and photographic chemicals can cause the surface to go black or peel.

7



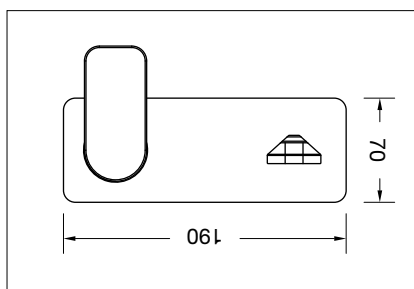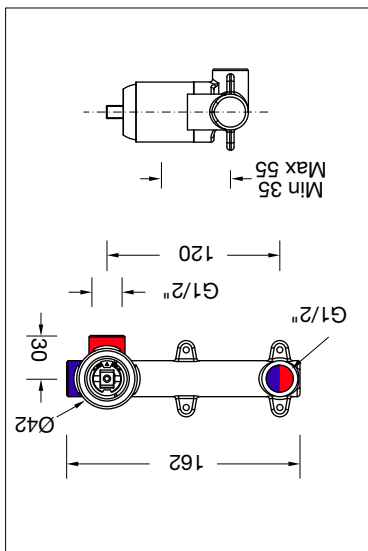

DIMENSIONS

WARRANTY

EURORAMA'S products are designed, manufactured and tested to the highest International Standard. Rubinetterie EURORAMA Company guarantees its own products against incidental defects coming from manufacturing or workmanship.

The Guarantee is valid for all the Products listed in the Catalogues as per the below conditions:

5 Years on the Cartridge

5 Years on the Ceramic head valves

2 Years for parts involve Mechanical Movements

5 Years on Chromium Plate Finishing, provided that they are treated in a correct way

2 Years for the other finishing (coloured, gold, bronze and so on...)

Should a complaint arise, the product must be given to our Merchant where it was bought along with a copy of proof of purchasing. The Faulty Material should be dispatched only through our Merchant, free our warehouse, to our Building Unit N°3 (Via al sesia, 4 Fr. Roccapietra 13019 VARALLO (VC) ITALY). Should the defect be found by our Technical Department according to the Company Quality System UNI EN ISO 9001, it will be replaced free of charge.

The Guarantee is not valid in case of:

1. use of chemical, acid, limestone, not drinking water or in case of pipelines below zero and not filter Water.

2. use on the surfaces of wire wool or scratchy cloth abrasive detergents, corrosive substances containing alcohol or acid.

3. damages or defects arising from incorrect Installation, Improper use, lack of maintenance, including build-up of lime scale; damages if the products is installed, taken apart, modified or misused by no competent persons.

4. non-fulfilment, or misused of the Instruction listed in the Istallation and Maintenance Guide

5. damages Caused by trasport or negligent warehousing

NOTICE

Many household cleaners contain abrasives and chemical substances ant They can seriously damage our Products.

So We suggest to clean them with a mild washing up detergent or soap solution and then wiped dry using a soft cloth.

The present Guarantee does not undermine the Rights as provided in the IT Law "d.lgs 02/02/02 n. 24" accomplishment EEC Directive "1999/44/CE".

RUBINETTERIE EURORAMA'S LIABILITY WILL NOT EXCEED THE CONTRACT PRICE FOR THE PRODUCT CLAIMED TO BE DEFECTIVE OR UNSUITABLE. THIS WARRANTY IS LIMITED SOLELY TO THE ABOVE AND THIS WARRANTY AND ANY WARRATIES IMPLIED BY STATE LAW WILL APPLY ONLY FOR THE APPLICABLE WARRANTY PERIOD SPECIFIED HEREIN.

PLEASE ALWAYS KEEP THE PROOF OF PURCHASING, IN ORDER TO OBTAIN THE RIGHT TO GUARANTEE SERVICE.



WARNING
- Installation Performed By Qualified Personnel Only!
- Clean Carefully the water Pipes Before Installing The Tap.
turn the boiler off and non return valves are not required.
combination boilers are fitted it is only necessary to shut off the incoming mains and hot and cold pipes as close as possible to the tap. These are not supplied. Where supplied from a tank and cold from the mains, non return valves are fitted on both These taps are double flow. Water bylaw require that where the hot water is

Preparation and bylaw requirements
applicable.
Bylaws Scheme and comply with requirements of British Standard 5412:1996 where

Approvals
All product are manufactured using materials tested and approved under the Water

claimable under the warranty.
installation process, incorrect maintenance or misuse and as a result not be

- on receipt of this product the chrome finish must be checked for blemishes.
product may not correctly work or not work at all.

- if the above mentioned conditions (see points 1,2,3,4) are not observed, the

Warning:
5. We recommend installing filters to this product.

3. Maximum hot water temperature:.....80° C
2. Maximum test pressure:.....5 Bar
1. Recommended working pressure:.....1 Bar

Standard specifications
thoroughly after installation to avoid damaging the ceramic disc.

valves on both hot and cold feeds. It is very important that all pipe work is flushed

then the tap will not function correctly. It will also be necessary to fit non-return

combination boiler for example). If the taps are not supplied at balanced pressures

at balanced pressures, both from the tank or both from the mains (via a


contained in their bylaws. All of the taps in this range are double flow (the hot and

The installation must comply with regulations of the Local Water Authority as

General Installation Requirements
reference.
Please read these instructions carefully and keep in a safe place for future

INTRODUCTION

WALL MOUNTED BASIN MIXER

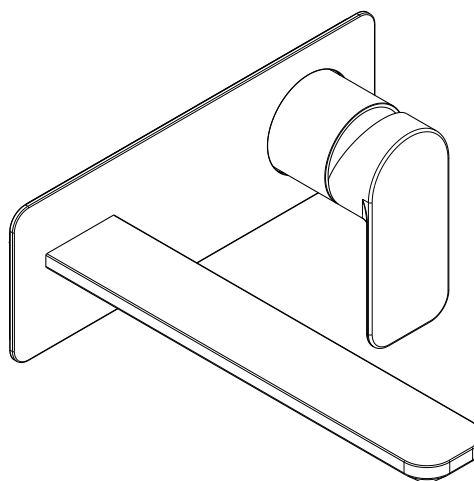

INSTALLATION INSTRUCTIONS